



Solid equipment. Sound advice.

HOBART ECOMAX450 OPERATING INSTRUCTIONS

To fill the machine

1. Ensure drain plug and rack support grid is in place.
2. Close door & press ON / OFF button to turn machine on.
3. Press the START button - machine will automatically stop when fill is complete.

To run a cycle

1. Select required wash cycle by pressing the cycle selector button: -
 1. Glass symbol (button depressed) – lightly soiled items
 2. Plate symbol (button raised) – medium to heavy soiled items
2. Pre rinse items, load into rack & close door.
3. Press the START button. Wash cycle will commence (wash tank temperature – 60-65°C), cycle lamp will flash & rinse cycle will follow. Rinse will commence when temperature lamp goes out, indicating rinse temperature of 82°C has been reached
4. When cycle is completed, unload & repeat step 2. If a different length cycle is required start at step 1

To drain the machine

1. At the end of wash up period, open door. Remove drain plug.
2. Turn the machine off by pressing the ON / OFF button. Press the DRAIN button. Machine will drain & switch off when finished.
3. Remove rack support grid and clean machine. Leave open to air dry.

DO NOT OPEN DOOR DURING WASH CYCLE.

www.hobartequipment.com.au