



Solid equipment. Sound advice.

## **HOBART ECOMAX500 OPERATING INSTRUCTIONS**

### **To fill the machine**

1. Ensure drain plug & strainers are in place.
2. Close door & press ON / OFF button to turn machine on.
3. Press the START button - machine will automatically stop when fill is complete.

### **To run a cycle**

1. Select required wash cycle by pressing the cycle selector button: -
  1. Glass symbol (button depressed) – lightly soiled items
  2. Plate symbol ( button raised) – medium to heavy soiled items
2. Pre rinse items, load into rack & close door.
3. Press the START button. Wash cycle will commence (wash tank temperature – 60-65°C), cycle lamp will flash & rinse cycle will follow. Rinse will commence when temperature lamp goes out, indicating rinse temperature of 82°C has been reached
4. When cycle is completed, unload & repeat step 2. If a different length cycle is required start at step 1

### **To drain the machine**

1. At the end of wash up period, open door. Remove drain plug.
2. Turn the machine off by pressing the ON / OFF button. Press the DRAIN button. Machine will drain & switch off when finished.
3. Remove strainer pans and clean machine. Leave open to air dry.

**DO NOT OPEN DOOR DURING WASH CYCLE.**

[www.hobartequipment.com.au](http://www.hobartequipment.com.au)